









## IS USED BY



















999986

•••••





DIS-ASSEMBLE BOXED UNIT AND USE CHASIS TO MARK EIGHT PILOT HOLES AT SHOULDER HEIGHT APPROXIMATELY 1.5m OR 5ft FROM THE GROUND KEEP AWAY FROM LEVER ASSEMBLYS





DRILL 1/8 PILOT HOLES ENSURING THE DRILL BIT IS SET SHORT SO NOT TO PASS THROUGH THE FRAME





USE THE 4 COUNTERSUNK SCREWS PROVIDED TO SECURLY MOUNT THE CHASIS

DO NOT OVERTIGHTEN







BRASS CLASP USE CHROME SCREWS PROVIDED CHROME CLASP USE BRASS SCREWS PROVIDED TO MOUNT SECURITY CHAIN THROUGH CHASIS





SECURELY FASTEN CHAIN THROUGH CANISTER HOUSING ONTO FRAME BUT DO NOT OVERTIGHTEN



## **FORENSIC REGISTRATION**

THIS PROCESS MUST BE CARRIED OUT BY THE SECURITY PROFESSIONAL WHO INSTALLED AN A.I.M FORENSIC DOOR ALARM AND IT IS IMPORTANT THAT ALL RELEVANT SECTIONS ARE COMPLETED ESPECIALLY THE UNIQUE FORENSIC CODE DETAIL LOCATED ON THE BASE OF THE ALARM/CANNISTER OR INSIDE THE SAFETY CAP.

FORENSIC REGISTRATION GO TO WWW.AIMDNA.COM






.....


REMOVE ALARM HEAD & WHITE SAFETY CAP

GENTLY REST ALARM
HEAD ON TOP OF
CANISTER ENSURING YOU
DO NOT PUSH DOWN

HOLDING THE CANISTER
LOCATE ON THE BASE
PLATE AND PUSH DOWN &
BACK INTO PLACE THEN
GENTLY ROTATE
EVACUATION POINT
TOWARD THE OPENING
SIDE OF THE DOOR

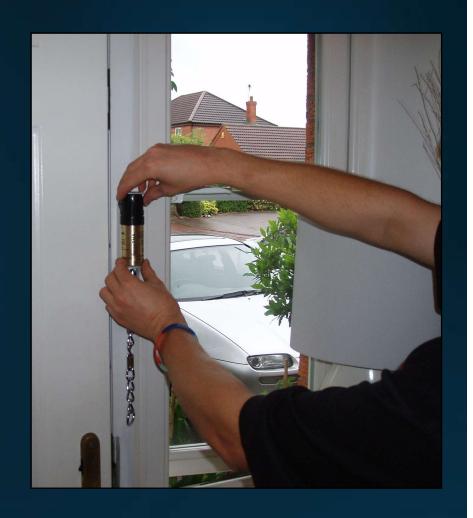




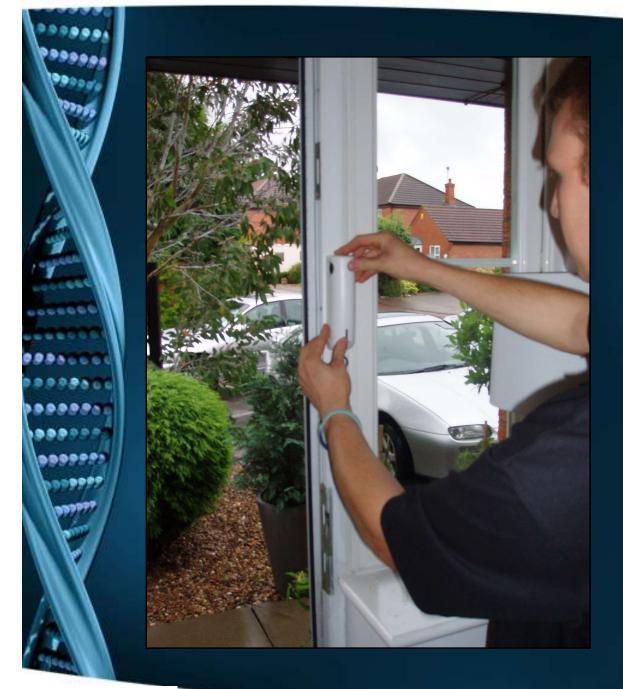

INSERT EVACUATION
COVER TO THE SIDE
NOT TO BE USED &
PLACE COVER OVER
THE TOP OF THE
ALARM HOUSING AT
THE TOP THEN PUSH
BACK INTO PLACE

THE GRILL OF THE ALARM SHOULD BE FACING TOWARD THE OPENING OF THE DOOR

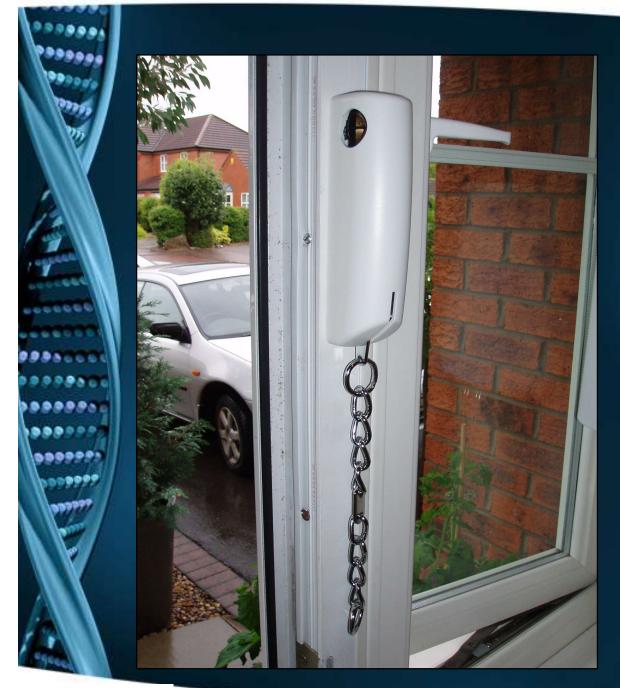


A.I.M INSTALLED







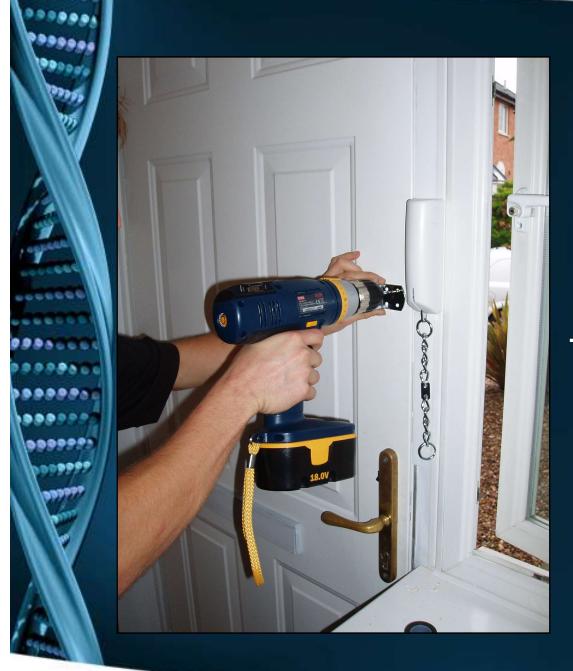

INSTALL THE CLASP IN LINE WITH THE BASE OF A.I.M

ENSURE THERE IS 15mm
GAP FROM THE EDGE OF
THE DOOR IF FITTED WITH
A COUNTER LEVER
LOCKING ASSEMBLY
DO NOT OVERTIGHTEN





AFFIX WARNING
STICKERS TO
WINDOWS OR GLASS
PARTITIONS AT THE
FRONT AND BACK OF
YOUR PROPERTY









CHECKING THE
IDENTITY OF THE
CALLER PRIOR TO
ALLOWING THEM
ACCESS INTO YOUR
HOME

A.I.M CAN ALSO BE
INSTALLED ON
BACK & PATIO
DOORS TO BE USED
AS AN OPT-OUT
DOOR SECURITY
DEVICE

